
PRODUCT DESCRIPTION


- The ES4300A may be integrated with Access Control systems, or applied as a stand-alone solution for monitoring Exit Doors. (Replaces all ES4300 K1 and K2 models)
- Inputs: Bypass/Reset N/O Dry Contact; Door Contact - N/C
- **Output**: Intrusion/Tamper Alarm Status Form-C Dry Contacts. **Note:** Cut cable tie to enable Tamper switch.
- **Bi-color LED** shows status. Armed = Red; Bypass = Green
- LED Output can power a remote Bi-Color LED to indicate unit status. (ES450 Series Key Switch w/ Bi-Color LED is suggested)
- Key-Only (manual) Alarm Reset is the default configuration.
- **Auto-Reset** timing may be field configured to reset the audible Alarm and the Output Relay after the Door is closed. (0 to 60 Seconds) Move Jumper to enable Auto Reset.
- **Shunt Delay** adjustable from 0-20 seconds. (Allows door access time after a Key or Bypass input).
- K3 and K4 Option (without Pushbutton) includes a **Wire Guard** over lock hardware.
- Optional **Pushbutton** model on a 3-Gang faceplate. See separate Pushbutton instructions for detail.



ES4300A *exit alarm installation instructions*

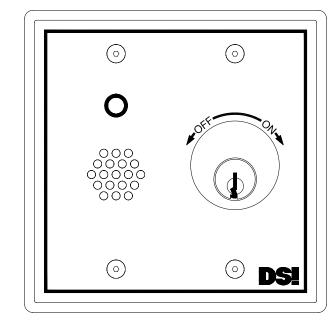


ES4300A-K3

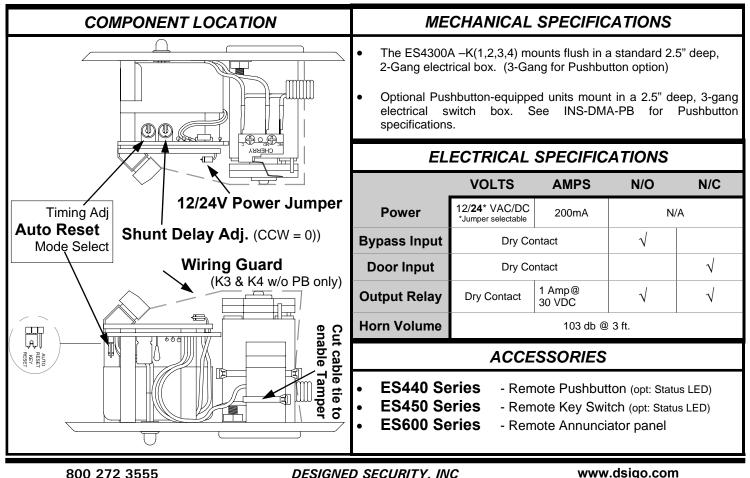

Fax 512 321 9181

DESIGNED SECURITY, INC 1402 Hawthorne, Bastrop, Texas 78602 www.dsigo.com Email: dsi@dsigo.com



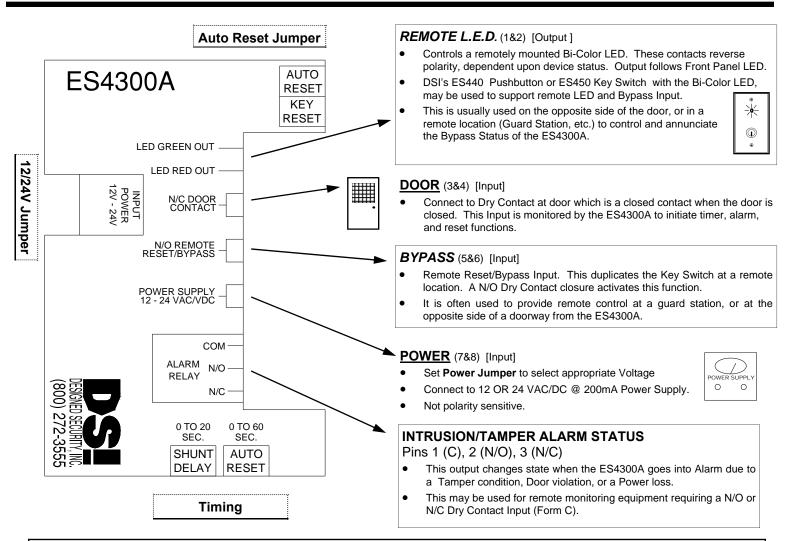

WIRING AND CONFIGURATION

REQUIRED

- Connect a N/C Door contact to TS1 3 & 4 (N/C when door is closed)
- Connect a 12 or 24 Volt* AC/ DC (@200ma) Power Supply to TS1 7 & 8. Not polarity sensitive.

*Select using Voltage Jumper prior to applying power. (Default = 24V)

• On K3 & K4 models, fold attached **Wiring Guard**** over RIM hardware and then under wires.

**Prevents wiring from interfering with RIM hardware movement. (not present w/Pushbutton option)

OPTIONAL

- Connect a N/O input to TS1 5 & 6, to provide remote Reset/Bypass capabilities. (ES450 Series)
- Connect the LED Output to a Bi-Color LED for remote status indication. (ES450 Series)
- Connect Remote Monitoring equipment to the N/O, or N/C Alarm Output.
- Enable Tamper Switch by removing the cable tie holding the switch closed.
- Auto Reset or Key Reset (default) is selected via Jumper (Auto Reset Timer disabled in Key Reset mode)