ES500


(Battery Powered Exit Alarm)

Note: During set-up


The magnet is mounted to the door frame.

The internal reed switch will indicate an opened or closed door.


Handing is programmed for left or right door mounting.

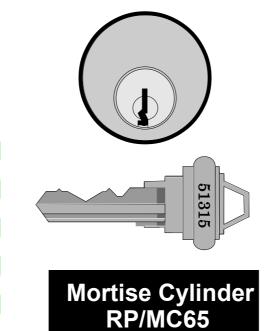


Auto
Re-Arm
Jumper
On
Alarm will automatically re-arm 2 minutes
after the door is closed

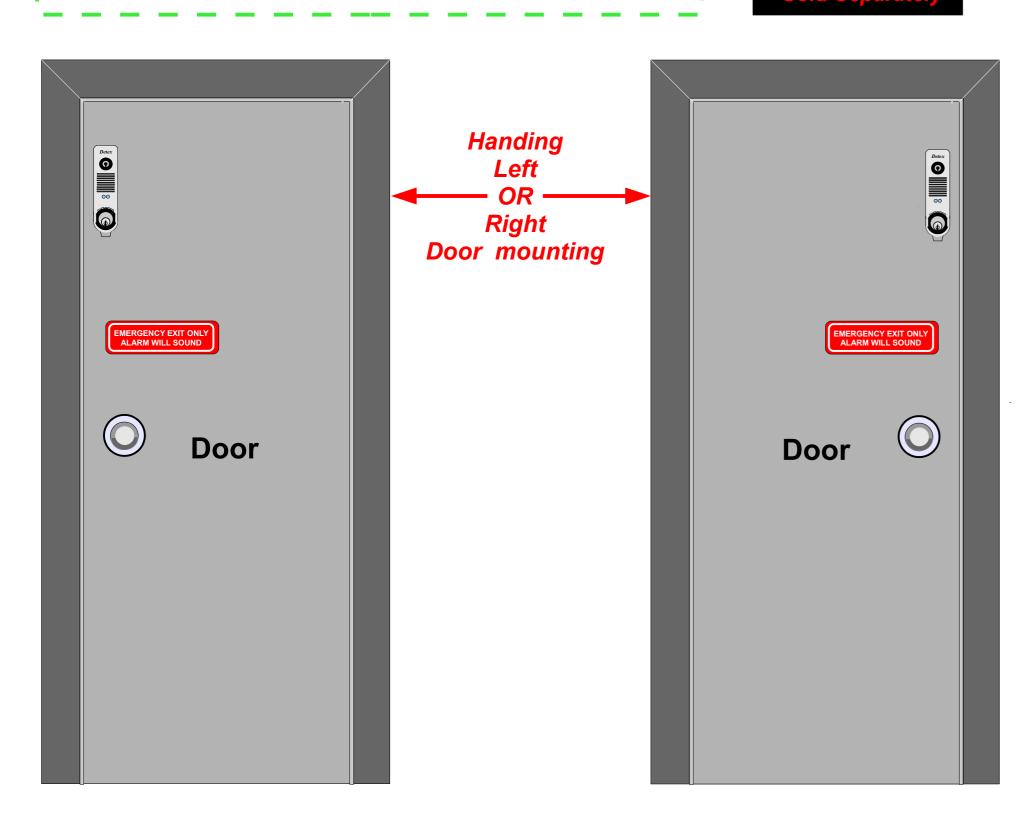



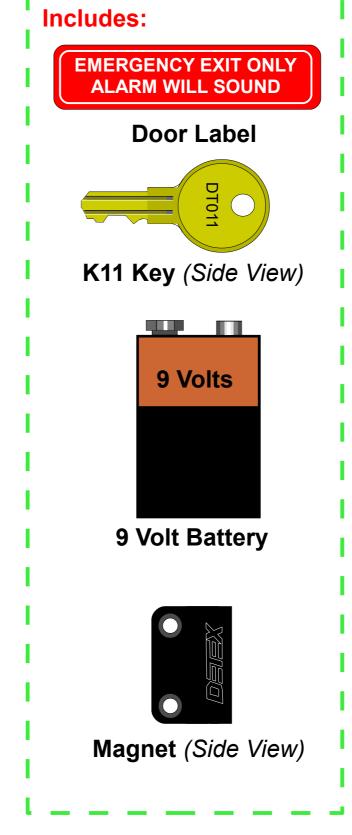

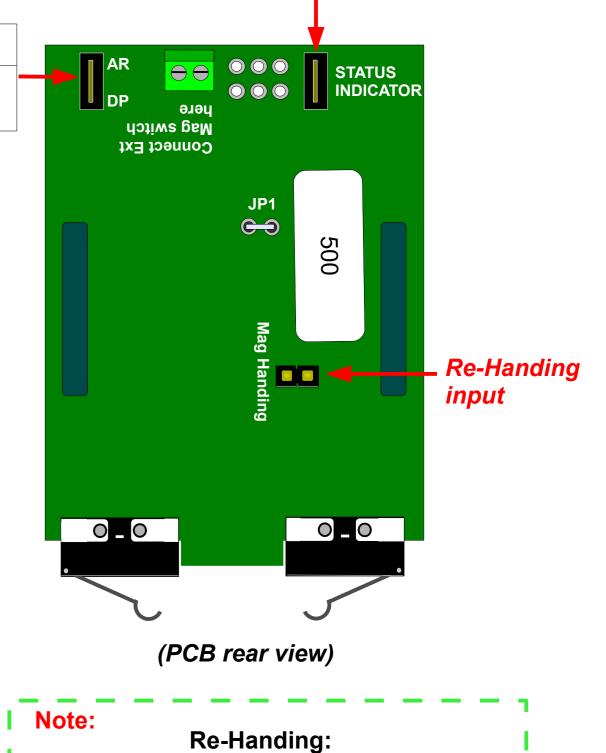

Red LED blinks every 6 seconds

Green LED blinks every 6 seconds

Off No LED indication

Armed

Disarmed

Status

Indicator

Jumper



A momentary short on this input will clear

I the left or right handing program.

ES500xMC65


(Battery Powered Exit Alarm with Mortise Cylinder)


Note: During set-up

The magnet is mounted to the door frame.

The internal reed switch will indicate an opened or closed door.

Handing is programmed for left or right door mounting.

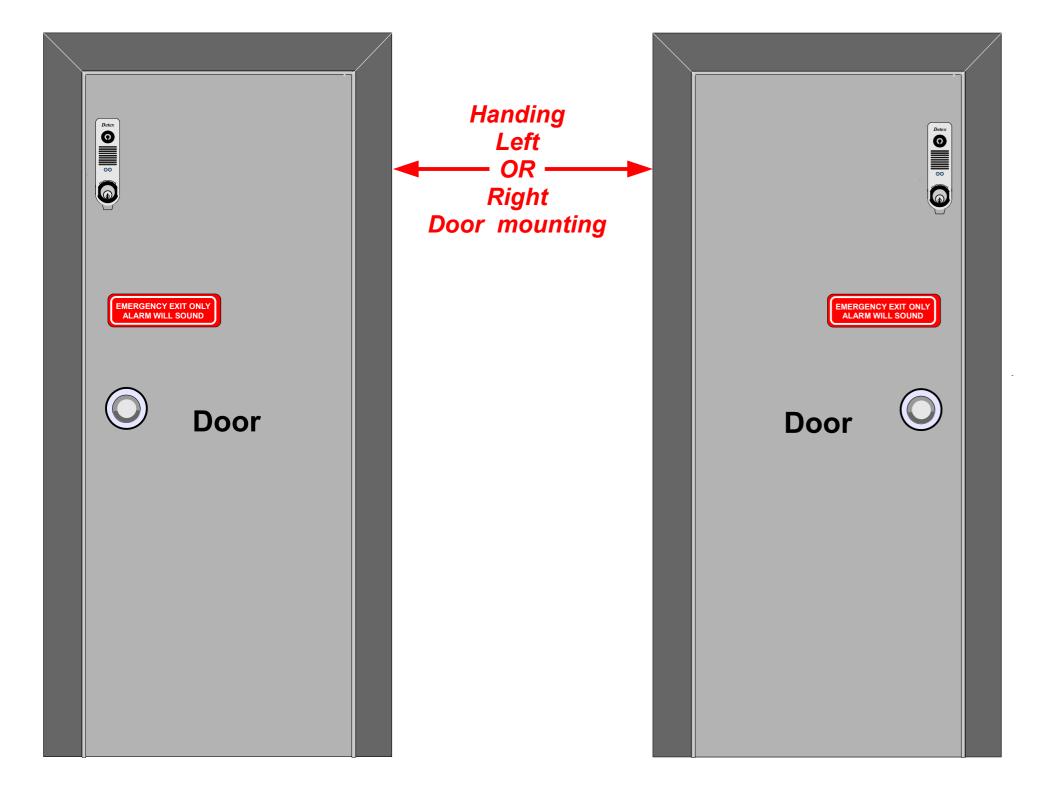


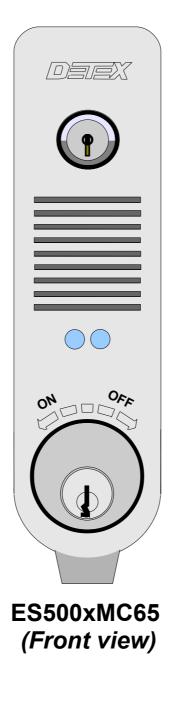


Auto

Re-Arm

Jumper

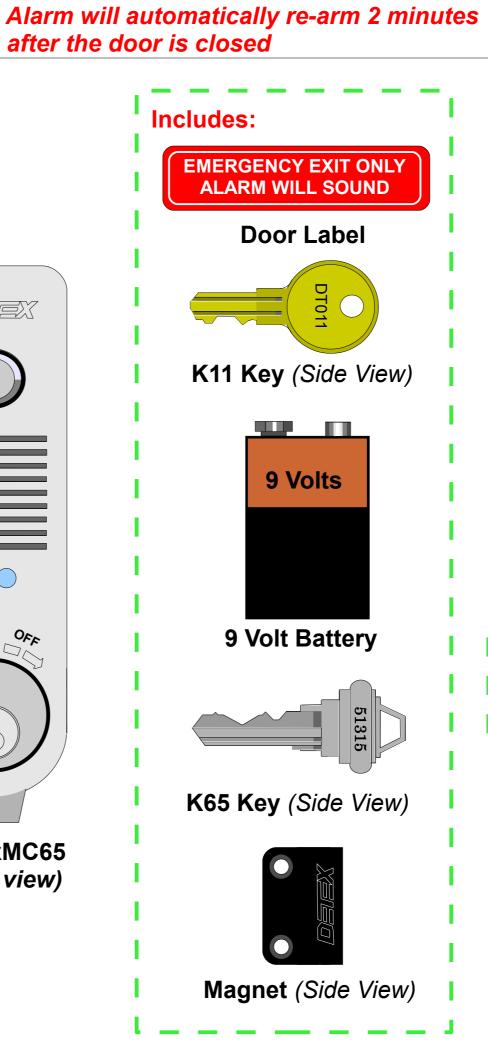

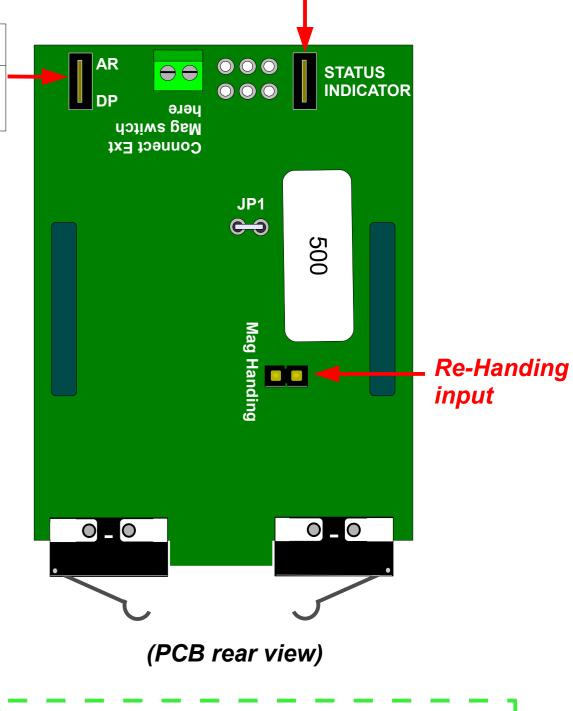

Red LED blinks every 6 seconds

Green LED blinks every 6 seconds

Note:

Off No LED indication

Disarmed

Status

Indicator

Jumper

Key Required to reset the alarm

Re-Handing:

A momentary short on this input will clear I the left or right handing program.



External Door Switch Mounting

Note: Wire Gauge: 22 AWG = Door switch wires (Wire runs over 10 feet use 18 AWG twisted pair)

Wire door switches to P1 terminal on PCB. 1/16 slotted

K11 Key (Side View)

1-800-272-3555


Door switch must be closed when the door is closed.

Cut JP1 jumper

Jewelers screwdriver needed.


Note: During set-up

Door Switch Door Switch DC/HS30 DC/HS30

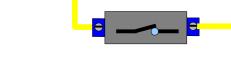





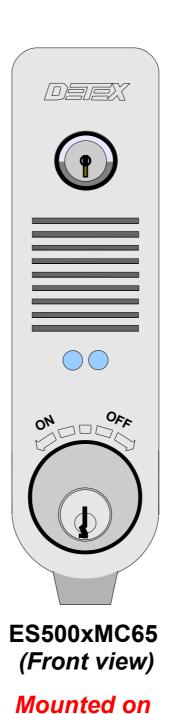

the wall

