ES611

ZONE ANNUNCIATOR WITH SHUNT


Shunt Switch-

Toggle to the left to shunt the zone. (Example zone one)

Global Alarm Relay

N/O dry contact. 500ma @30VDC

> 1 Gang back box 2.5" deep

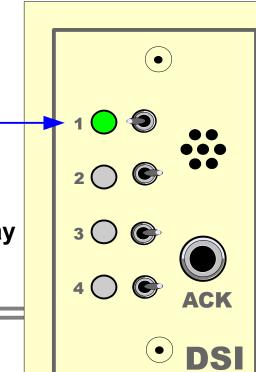

12-VDC 150mA **Power Supply** Sold Separatel

Note:

Wire Gauge: Signal

22 AWG = Signal wires up to 85 feet 18 AWG = Signal wires up to 180 feet 16 AWG = Signal wires up to 300 feet

Wire Gauge: Power

22 AWG = Power wires up to 85 feet 18 AWG = Power wires up to 180 feet

ES611 (Front View)

Alarms when door switch opens.

For eight zones use an

For twelve zones use an

ES631

Note:

ES621



1-800-272-3555

